

| Troubleshooting Guide                           |              |                                     |   |  |                       |  |                   |  |  |  |
|---|--------------|-------------------------------------|---|--|-----------------------|--|-------------------|--|--|--|
| Product   | Knapsack     | Spraye                              | er <b>Mod</b>   |  | del CT                |  | T-HS16L, CT-HS20L |  |  |  |
| Problem   |              |                                     | Cause   |  |                       | Solution   |                   |  |  |  |
| In case of leakage or poor spraying performance |              |                                     | Seal rings at various joints may<br>loose or be damaged.<br>leakage of the cylinder |  |                       | Tighten or replace.  |                   |  |  |  |
| Hard to turn the rock bar                       |              |                                     | The shut-off strainer or the spray nozzle has been blocked;                         |  |                       | Clean the strainer and spray nozzle<br>immediately;<br>Apply lubricant grease to various<br>moving part. |                   |  |  |  |
| In case of decreasing of pressure               |              |                                     | Broken leather cup, damaged seal ball or loose seal ball holder.                    |  |                       | Replace the leather cup or seal ball, or tighten the seal ball holder.                                   |                   |  |  |  |
| It produce no p<br>rock bar                     | ressure to t | Seal ball may be displaced or lost. |   |  | Re-install seal ball. |  |                   |  |  |  |

 
## (i) information

If your machine seems to need further service, please consult with your local authorized dealer or service center.

LRAFIOP

## (i) information

All information and descriptions are as accurate as known at the time of publication, but are subject to change without notice.





| Guía para resolver problemas                           |                         |   |   |          |   |  |                      |  |  |  |
|--|-------------------------|---|---|----------|---|--|----------------------|--|--|--|
| Producto   | Pulverizador de mochila |   |   | Modelo   |   | С  | CT-HS16L, CT-HS20L   |  |  |  |
| Problema   |                         | Causa   |   | Solución |   |  |                      |  |  |  |
| En caso de fuga o bajo rendimiento<br>de pulverización |                         |   | Los anillos de sello en varias juntas<br>pueden aflojarse o dañarse.<br>fuga del cilindro |          |   | tas  | Apriete o reemplace. |  |  |  |
| Difícil girar la barra de roca                         |                         |   | El filtro de cierre o la boquilla rociadora están bloqueados;                             |          |   | Limpie el colador y la boquilla<br>rociadora inmediatamente;<br>Aplique grasa lubricante a varias<br>partes móviles. |                      |  |  |  |
| En caso de c<br>presión                                | lisminución             | Copa de cuero rota, bola de sello<br>dañada o soporte de bola de sello<br>suelto. |   |          | Vuelva a colocar la copa de cuero o<br>la bola de sellado, o apriete el<br>soporte de la bola de sellado. |  |                      |  |  |  |
| No produce pre<br>barra de roca.                       | sión para ç             | La bola de sellado se puede<br>desplazar o perder.                                |   |          | Vuelva a instalar la bola de sellado.   |  |                      |  |  |  |

## (i) Información

Si su máquina parece necesitar más servicio, consulte con su distribuidor local o centro de servicio autorizado.

## (i) Información

Toda la información y las descripciones son tan precisas como se conocen en el momento de la publicación, pero están sujetas a cambios sin previo aviso.